INSIGNIA™

51"/59" Plasma HDTV 600Hz 1080p

QUICK SETUP GUIDE

NS-51P680A12/NS-59P680A12

Thank You

for purchasing this fine Insignia television. We hope you enjoy the quality and reliability of this product for years to come.

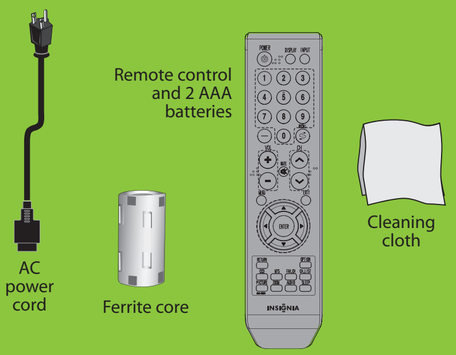

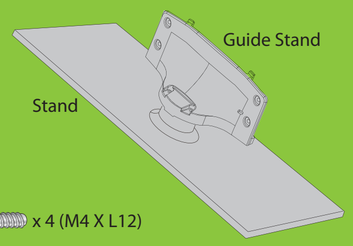

x 4 (M4 X L12)

x 4 (M4 X L8)

Securing your TV to a wall or cabinet

The anti-fall device is sold separately. To purchase an anti-fall device in the U.S., call **1-800-726-7864**.

Front features

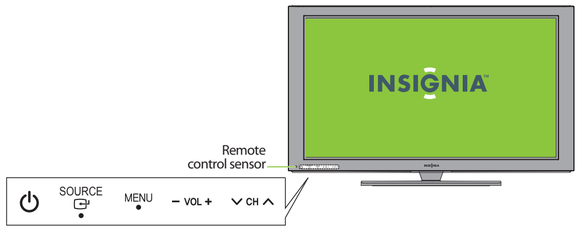

Installing the stand

1 Secure the guide stand to the base.

2 Secure the base to the stand with the four screws provided.

Warning- Use 2 or more people to help secure the stand.

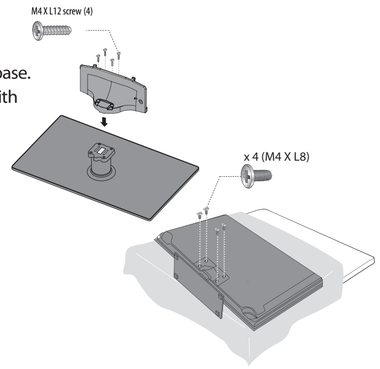

Installing a wall-mount bracket

1 If the stand is installed, remove the stand.

2 Attach the wall-mount bracket to the back of your TV using four M8 screws not provided. Install the base cover using the two screws (not included).

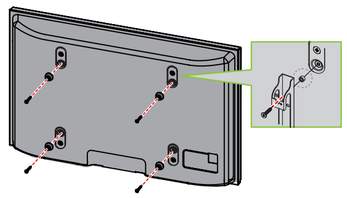

Setting up your remote control

1 Remove the battery cover.

2 Insert two AAA batteries into the battery compartment. Make sure that the + and – symbols on the batteries align with the + and – symbols in the battery compartment.

3 Replace the cover.

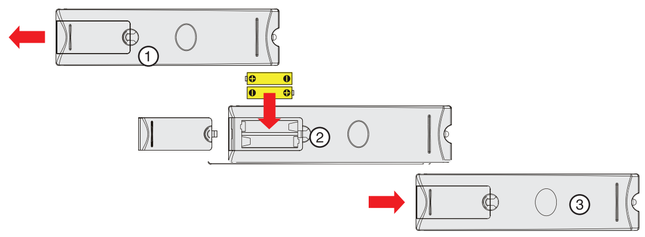

Programming your remote control

To program your universal remote control to work with your new Insignia TV, see the table for common codes. If you have problems programming your remote or need a different remote control code information, visit www.insigniaproducts.com for the latest remote control code information.

Universal remote TV codes							
Universal remote controls				Cable/Satellite/Set-top boxes			
One for All	Philips	RCA	Sony	Cablevision	Charter	Comcast	Cox
0054	0198, 0490	135	068, 069, 078, 096, 100, 164, 168, 229, 026	068, 069, 078, 096, 100, 164, 168, 229, 026	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586	10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002	1326, 1463

Universal remote TV codes				
Cable/Satellite/Set-top boxes				
Direct TV	Dish Network	Time Warner	Tivo	Verizon
10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002	720	400, 450, 461, 456, 10463, 1463, 0463	0091	0198, 0490

Connecting a DVD or Blu-ray DVD player, cable box, satellite receiver, or game console

Using HDMI (best)

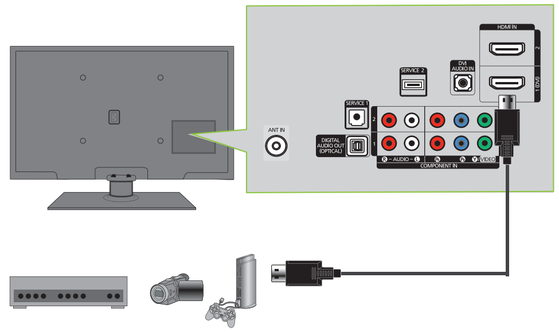

Using component (better)

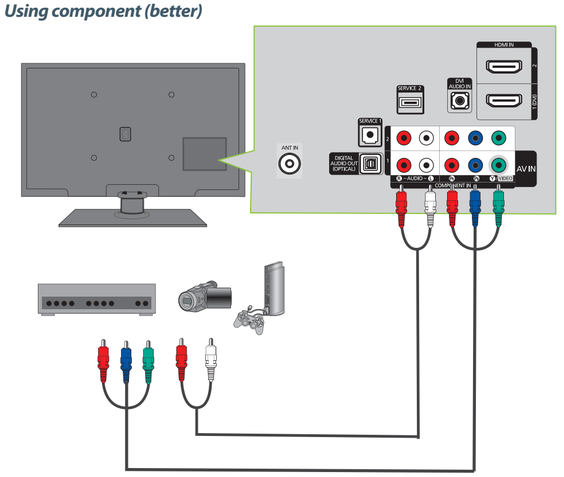

Installing the ferrite core

Open the ferrite core, slide the cables into the slot, then close the core.

Connecting an antenna

Connect a 75 ohm cable (not included) to the **ANT IN** jack on the back of your TV and the RF OUT jack on the antenna.

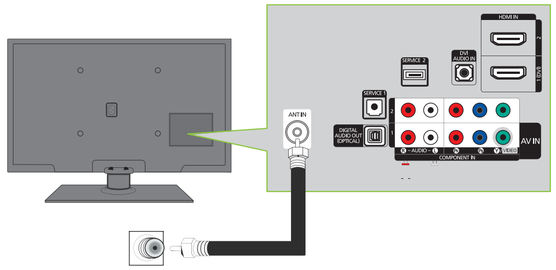

Connecting a Home Theater System

Using digital audio

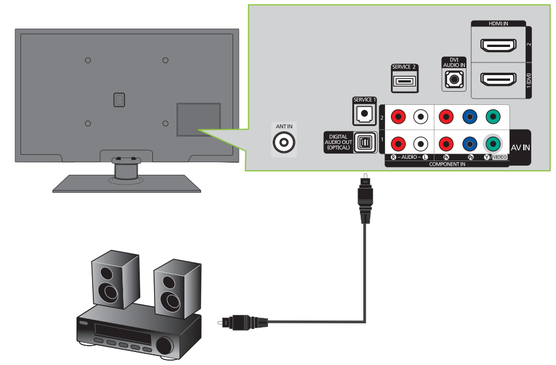

Connecting power

Plug the AC power cord into the **AC IN** jack on the back of your TV, then plug the other end of the cord into a power outlet.

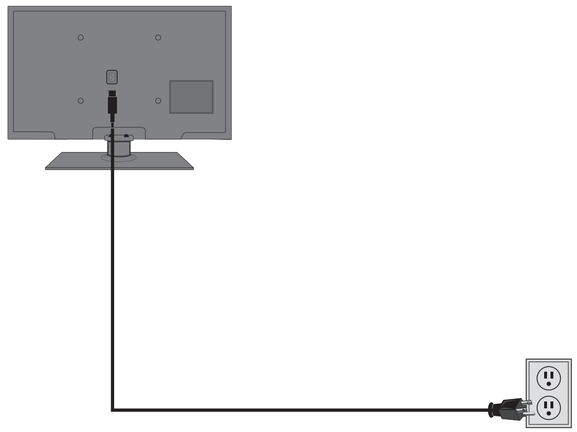

Turning on your TV for the first time

1 Connect the power cord.
2 Press ⏻ (power) to turn on your TV. The *Select Language of the OSD* screen opens.



3 Press **ENTER** to access the menu, then press ▶ to highlight a language. You can select **English**, **French**, or **Spanish**.
4 Press **ENTER**. The *Select 'Home Use' when installing this TV in your home* screen opens.

5 Press ◄ or ► to highlight **Home Use**, then press **ENTER**. The *Select the Antenna source to memorize* screen opens.
6 Press ▲ or ▼ to highlight your TV signal source, then press **ENTER**. Select **Air** (antenna), **Cable** (cable TV), or **Auto** (both antenna and cable TV).

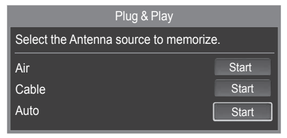

7 If you select **Cable**, press ▲ or ▼, ◄ or ► to highlight the cable TV signal type, then press **ENTER**. You can select **STD**, **HRC**, or **IRC.**
STD is the most common setting. If you do not know which type of cable TV signal you have, contact your cable TV provider.
Your TV starts searching for available channels in your area and stores them in the channel list. Scrambled channels are not stored in the list.
When the search is complete, the *Set the Clock Mode* screen opens.



8 Press **ENTER**, then press ▲ or ▼ to highlight **Auto** (to automatically set the time using time information from a digital channel) or **Manual** (to manually set the time), then press **ENTER**. If you select **Auto**, the *Set to daylight saving time* screen opens. If you select **Manual**, the *Set current date and time* screen opens.
9 If you selected **Auto**, press ▲ or ▼to highlight:
- **Off**—Turns off the daylight saving time feature.
- **On**—Turns on the daylight saving time feature.
- **Auto**—Sets the daylight saving time feature based on the time information from a digital channel.

10 Press **ENTER**. The *Set the time zone* screen opens.

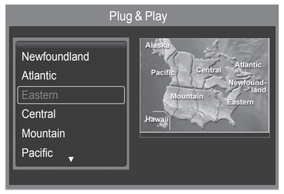

11 Press ▲ or ▼ to highlight a time zone, then press **ENTER**. If you receive a digital channel signal, the time zone is selected automatically.
12 Press **ENTER**. The *Enjoy your TV* screen opens.

13 Press **ENTER**. Your TV is ready to use.

Selecting the video input source

Press **INPUT**, one or more times to select:
- TV
- AV
- Component1
- Component2
- HDMI1/DVI
- HDMI2

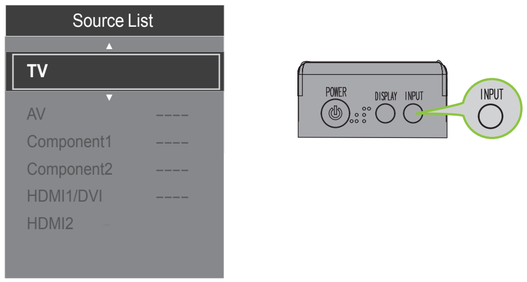

Adjusting the volume

- Press **VOL+** or **VOL-** to change the volume.
- Press **MUTE** to turn off the sound.

Selecting a channel

- To move to a different channel in the channel list, press **CH▲** or **CH▼**.
OR
- Enter the channel number directly using the number buttons.

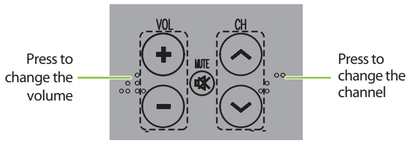

Viewing program information

- Press **DISPLAY** to view an information banner. The information banner displays status information, such as the channel number, type of sound, and picture and sound settings.



On-screen menu overview

Picture menu

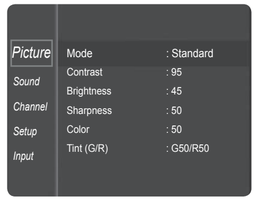

Sound menu

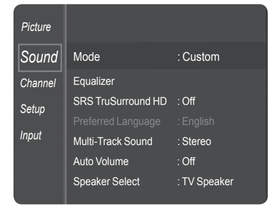

Channel menu

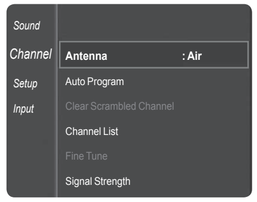

Setup menu

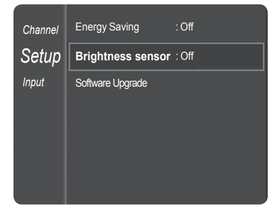

Input menu

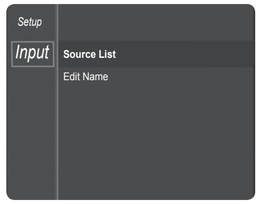

Navigating menus with your remote control

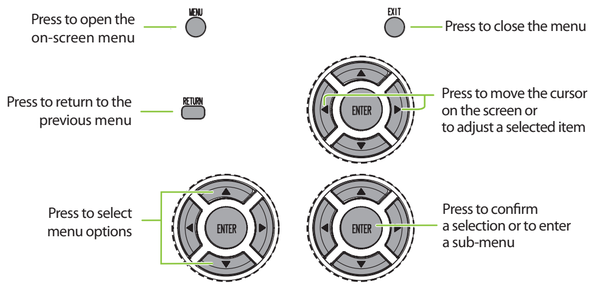
Press to open the on-screen menu
MENU
EXIT
Press to close the menu
Press to return to the previous menu
RETURN
ENTER
Press to move the cursor on the screen or to adjust a selected item
Press to select menu options
ENTER
ENTER
Press to confirm a selection or to enter a sub-menu

INSIGNIA™

Two-year limited warranty

See your *User Guide* or visit www.insigniaproducts.com for details.

Need additional help?

See your ***User Guide***! This comprehensive guide includes everything from basic how-to steps to more advanced features.

Check out our **online community forum** at www.insigniaproducts.com for helpful information from other Insignia TV owners.

We're here for you

www.insigniaproducts.com

For customer service, call:

877-467-4289 (U.S./Canada markets)

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, MN USA
55423-3645

© 2011 BBY Solutions, Inc.
All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.